


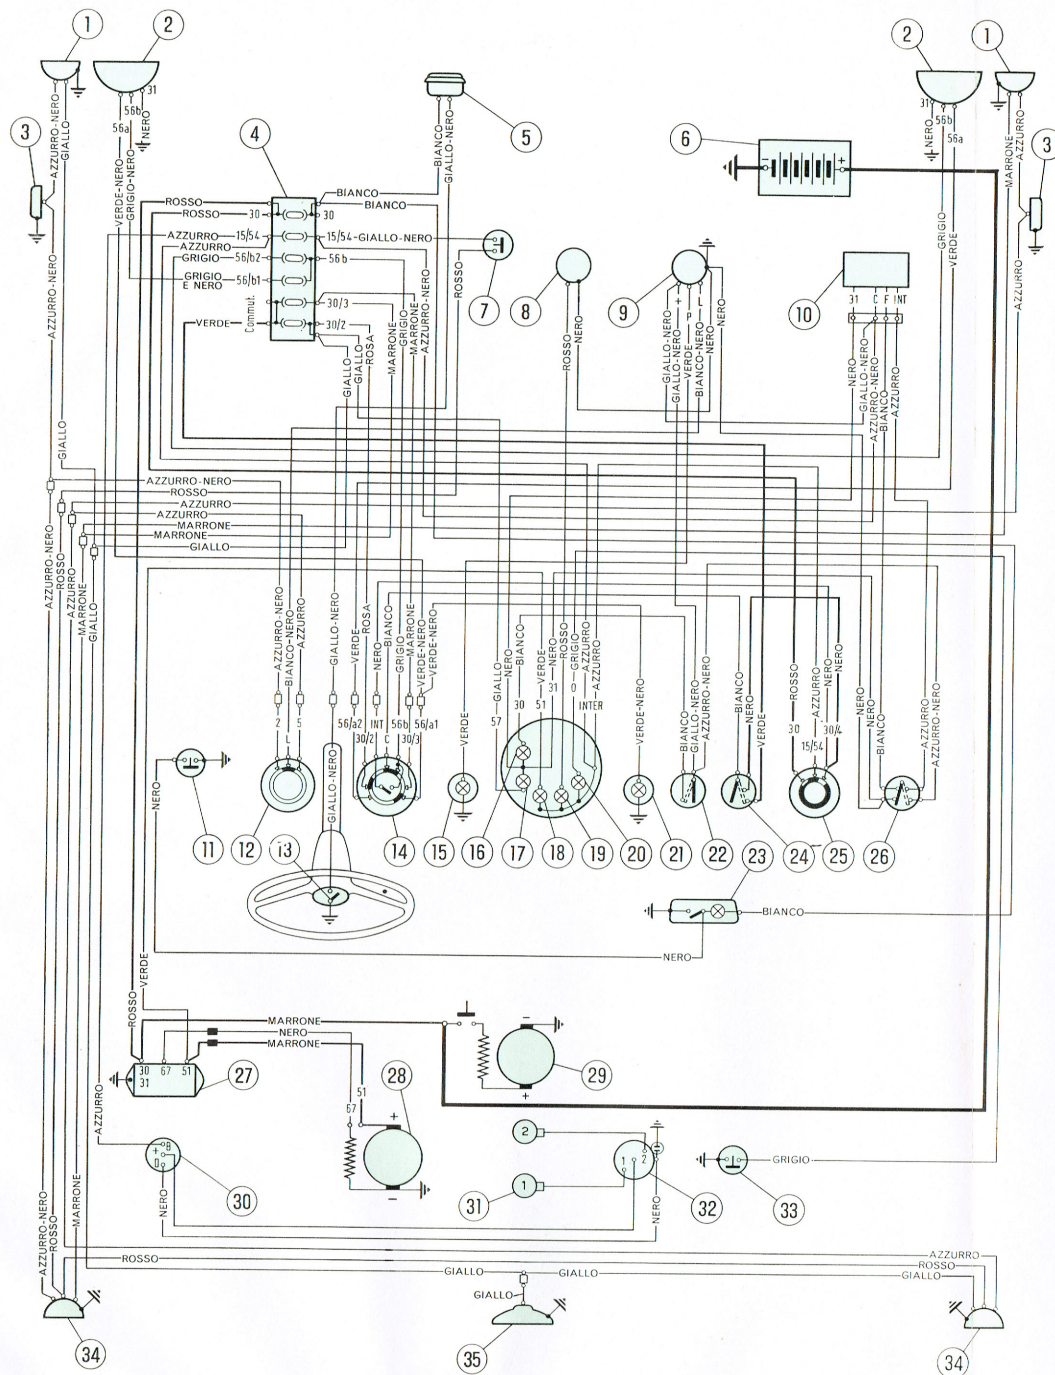

Wiring diagram.

1. Front parking and direction indicator lamps.
2. Headlamps (high and low beams).
3. Direction indicator side repeaters.
4. Fuses.
5. Horn.
6. Battery.
7. Stop lights pressure-operated switch.
8. Fuel reserve indicator sending unit.
9. Flasher (direction indicators).
10. Windshield wiper motor.
11. Courtesy light jam switch on door pillar.
12. Direction indicators switch.
13. Horn button
14. Outer lighting change-over switch.
15. Direction indicators pilot light.
16. Panel light.
17. Parking lights indicator.
18. Generator charge indicator.
19. Fuel reserve indicator.
20. Insufficient oil pressure indicator.
21. High beam indicator.
22. Panel light switch.
23. Rear view mirror light (courtesy).
24. Outer lighting switch.
25. Lock switch.
26. Windshield wiper switch.
27. Generator regulator.
28. Generator.
29. Starter motor.
30. Ignition coil.
31. Spark plugs.
32. Ignition distributor.
33. Insufficient oil pressure indicator sending unit.
34. Rear parking, stop and direction indicator lamps.
35. Number plate lamp.

Note. - Mark **==** means that cable is provided with numbered strip or ferrule.

KEY TO CABLE COLORS

Azzurro = Blue	Marrone = Brown	Verde = Green
Bianco = White	Nero = Black	
Giallo = Yellow	Rosa = Rosy	
Grigio = Grey	Rosso = Red	
		INT-INTER } = Switches
		Commutat. }